

5088 5288 5488
TRACTORS

Wiring Diagrams

CRANKING AND CHARGING CIRCUIT

(ORIGINAL DESIGN TO BE REWORKED)


| MODEL | SERIAL NUMBER |
|-------|---------------|
| 5088 | 6015 AND DOWN |
| 5288 | 4086 AND DOWN |
| 5488 | 2425 AND DOWN |

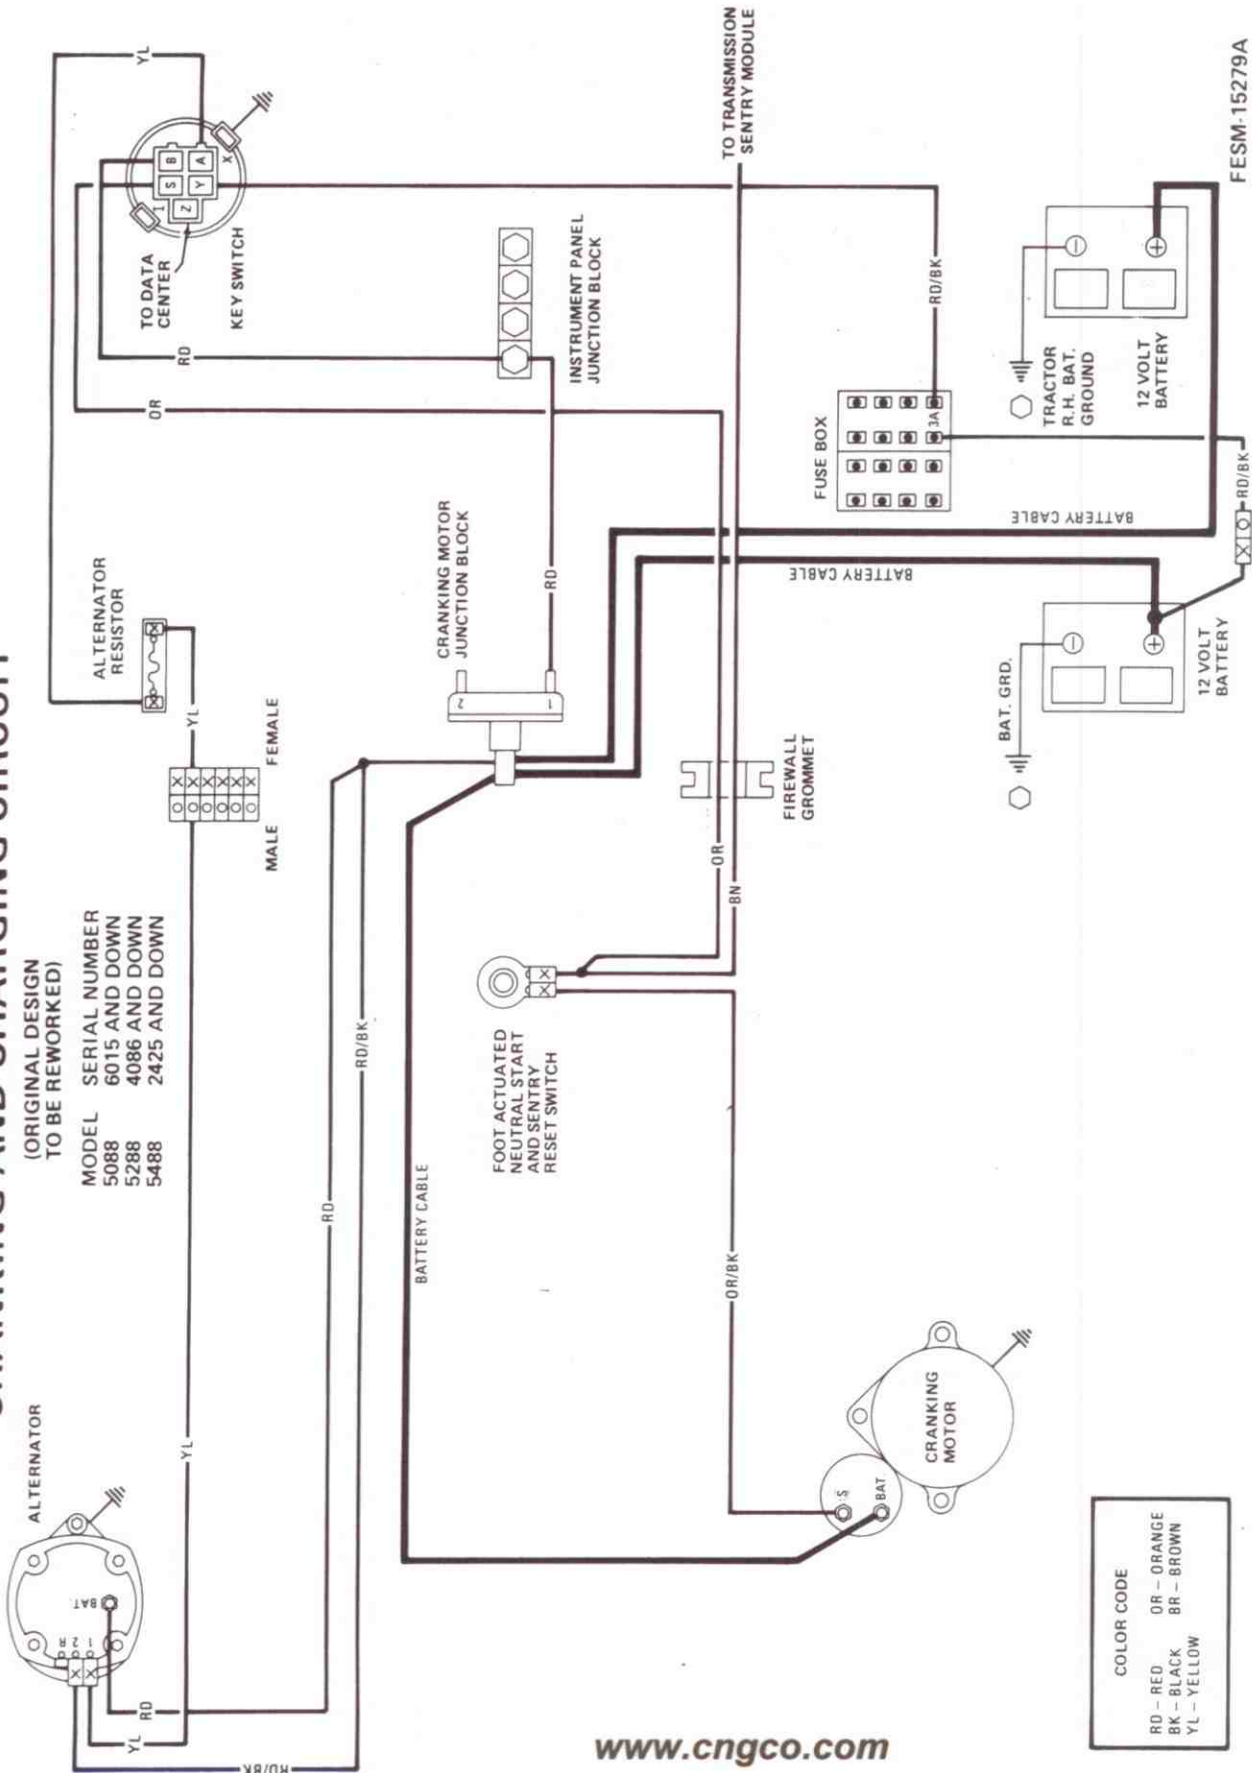

| COLOR CODE | |
|-------------|-------------|
| RD - RED | OR - ORANGE |
| BK - BLACK | BR - BROWN |
| YL - YELLOW | |

www.cngco.com

CRANKING AND CHARGING CIRCUIT

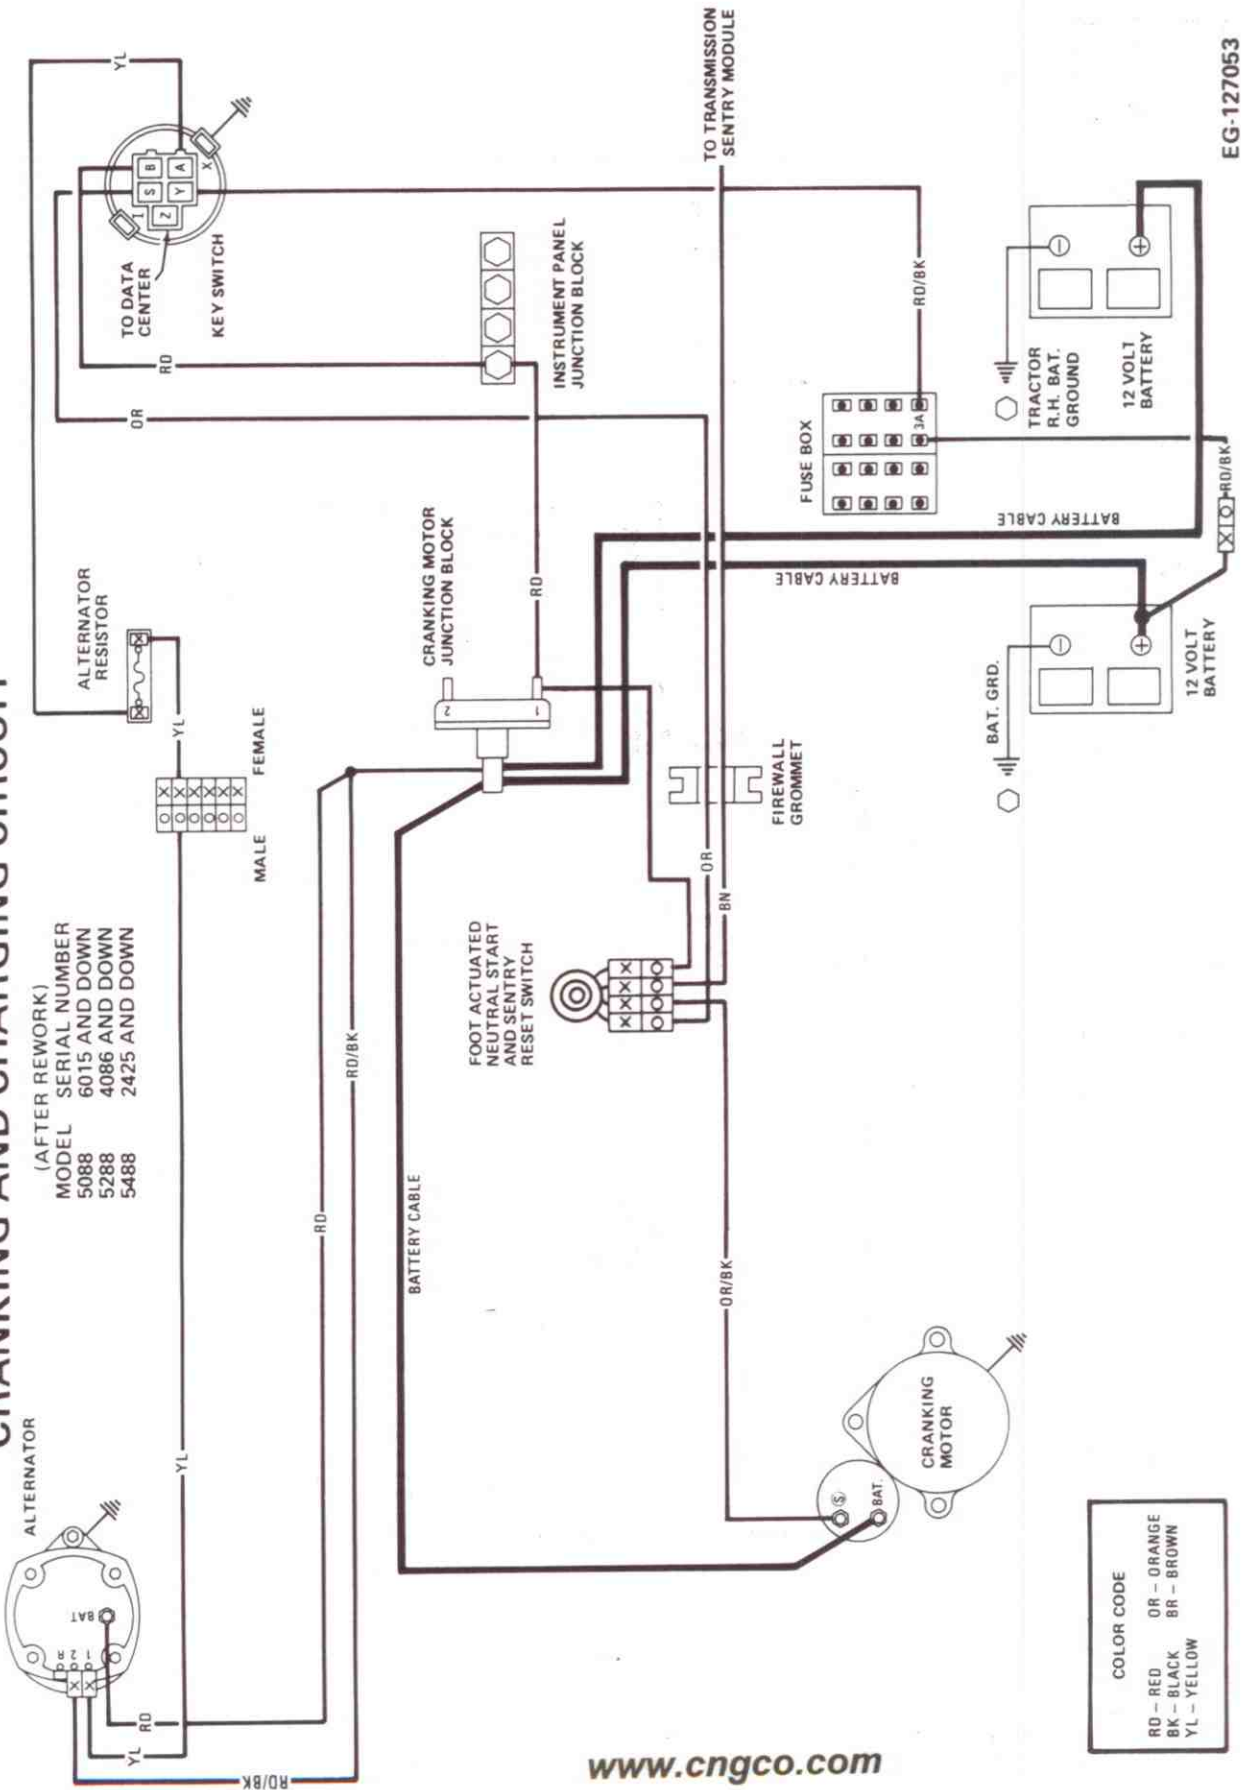


(AFTER REWORK)
 MODEL SERIAL NUMBER
 5088 6015 AND DOWN
 5288 4086 AND DOWN
 5488 2425 AND DOWN

| COLOR CODE | |
|-------------|-------------|
| RD - RED | OR - ORANGE |
| BK - BLACK | BR - BROWN |
| YL - YELLOW | |

www.cngco.com

CRANKING AND CHARGING CIRCUIT

MODEL SERIAL NUMBER
 5088 6016 AND UP
 5288 4087 AND UP
 5488 2426 AND UP

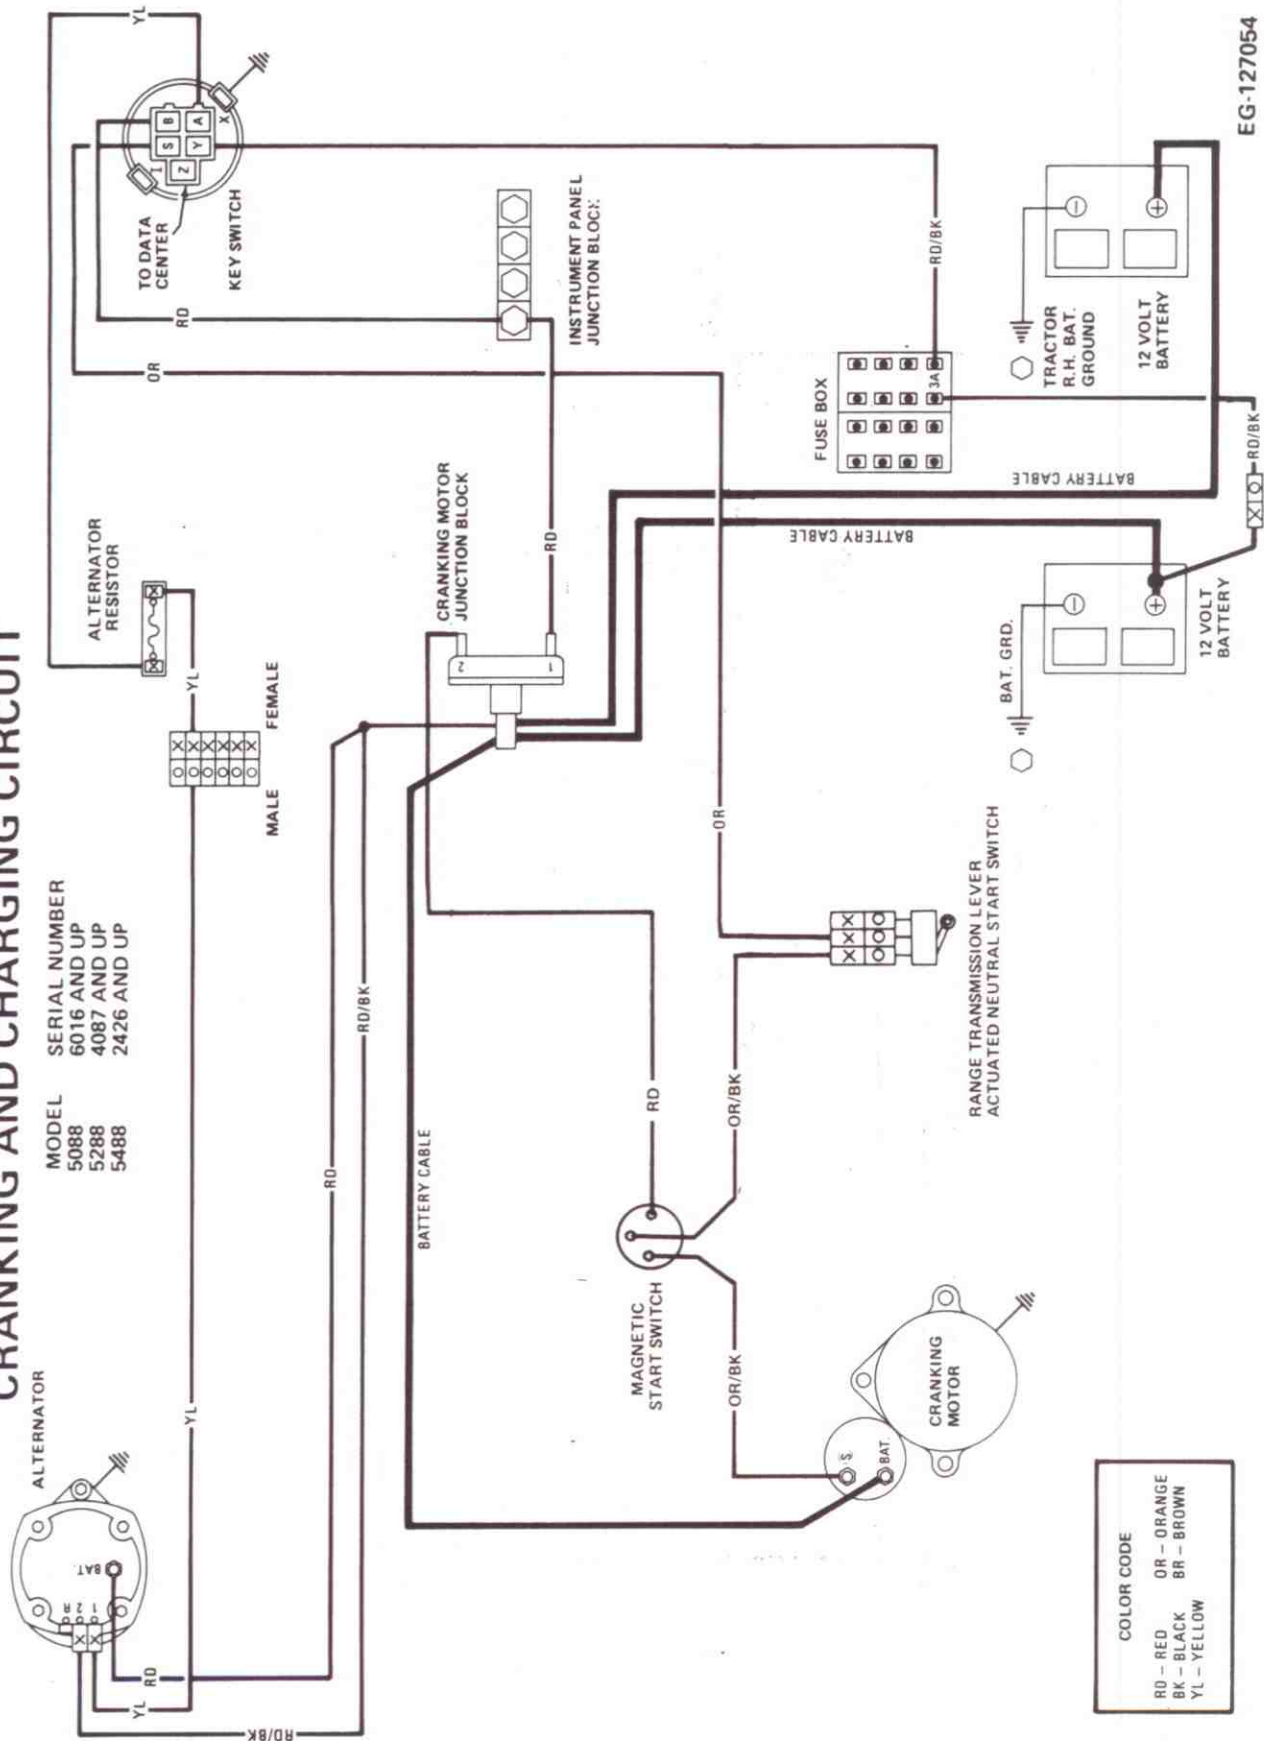

| COLOR CODE | |
|-------------|-------------|
| RD - RED | OR - ORANGE |
| BK - BLACK | BR - BROWN |
| YL - YELLOW | |

